SIRCOMA
BINGO

Players may choose from millions of cards by pressing a button. After a card has been chosen, press "start" button and numbers are selected at random. Numbers are drawn until the card has 8 to 12 numbers lit.

Familiar winning bingo combinations:

- Five in a row, horizontal, vertical or diagonal
- All four corners
- Both diagonals - super winner

There are fourteen ways to win and the center square is always "free." Winners are awarded free play credits only.

Features;

- Micro-processor based circuitry with back-up battery for memory
- High security cash box system — optional
- Multiple coin entry. Single coin optional
- Keyed reset for anti-cheat override

FOR AMUSEMENT ONLY

BINGO

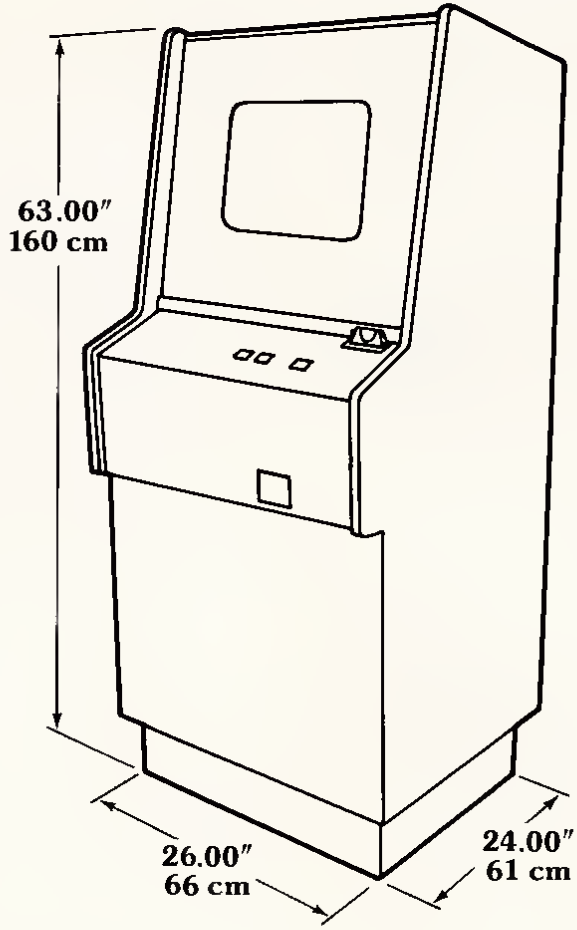

AC power
50-60 Hz
115V AC @ 2 amps
220V AC @ 1 amp

Weight 205 lbs.
93 kg.

- Ticket or token dispenser optional (where legal).

SIRCOMA
520 South Rock Boulevard • Reno, Nevada 89502 • (702) 323-5060 • TWX 910-395-7014